







Important

This instruction sheet must be handed to the end user by the installation engineer

User Instructions for RA-Media Mate Electric Height Adjustable Risers and Mobile Trolley Products

This range of products are Electrically Height Adjustable via the Flying Lead Remote Control or Up/Down Switches located on the side of the main riser body.

WARNING!

These products should only be used by adults who have been shown how to use the equipment safely by the Installation Engineer and under no circumstances operated by children unless under the supervision of an adult.

During operation of the screen height adjustment using the up/down switch always ensure there is adequate free space around the screen and equipment when in the fully lowered and fully raised positions to prevent accident or injury.

Typically; chairs, desks, cupboards, waste paper bins and other such objects to be kept well clear to prevent collision.





Important

This instruction sheet must be handed to the end user by the installation engineer

User Instructions for RA-Media Mate Electric Height Adjustable Risers and Mobile Trolley Products

This range of products are Electrically Height Adjustable via the Flying Lead Remote Control or Up/Down Switches located on the side of the main riser body.

WARNING!

These products should only be used by adults who have been shown how to use the equipment safely by the Installation Engineer and under no circumstances operated by children unless under the supervision of an adult.

During operation of the screen height adjustment using the up/down switch always ensure there is adequate free space around the screen and equipment when in the fully lowered and fully raised positions to prevent accident or injury.

Typically; chairs, desks, cupboards, waste paper bins and other such objects to be kept well clear to prevent collision.